



Quick Start Instructions

for No. 50380 Memory Tire Pressure Gauge

To Use As Traditional Tire Gauge

- Turn on, **Zero** as needed & take pressures. To hold pressure on display store in any Memory and recall - see below.

DON'T Zero with pressure on the gauge. **Zero** means '0' pressure.

- Use backlite as needed (Note: shortens battery life if used excessively)
- Low battery indication is shown on display. (replace w. 9 volt)
- Range 1.5 to 100.0 psi max - by .1 psi


To Use Memory

- Turn on, **Zero** as needed. Select wheel - *RF, LR*, etc. - using wheel buttons. LED will lite up. Select Hot (LED red) or Cold (LED green). See below.
- Take pressure reading. With pressure on display push "**Store in Mem**" button. Select next wheel, repeat above. Gauge will store 4 Cold & 4 Hot pressures.
- To recall select wheel & hot/cold, push "**Recall from Mem**" button.
- To erase 1 wheel Hot or Cold just store another pressure. To erase ALL pressures push "**Erase All Mem**" button & hold 2 seconds.

Notes:

- This unit can be easily recalibrated in the field, for example, to match the tire company's standard gauge. Call for info.
- In bright sunlite shade the display to see the LEDs.
- Use good quality alkaline 9 volt battery. Remove aluminum rear cover to replace.
- Unit shuts off after 2 minutes of inactivity to save battery life.

- Select hot or cold pressures
- Store in Memory
- Select wheels

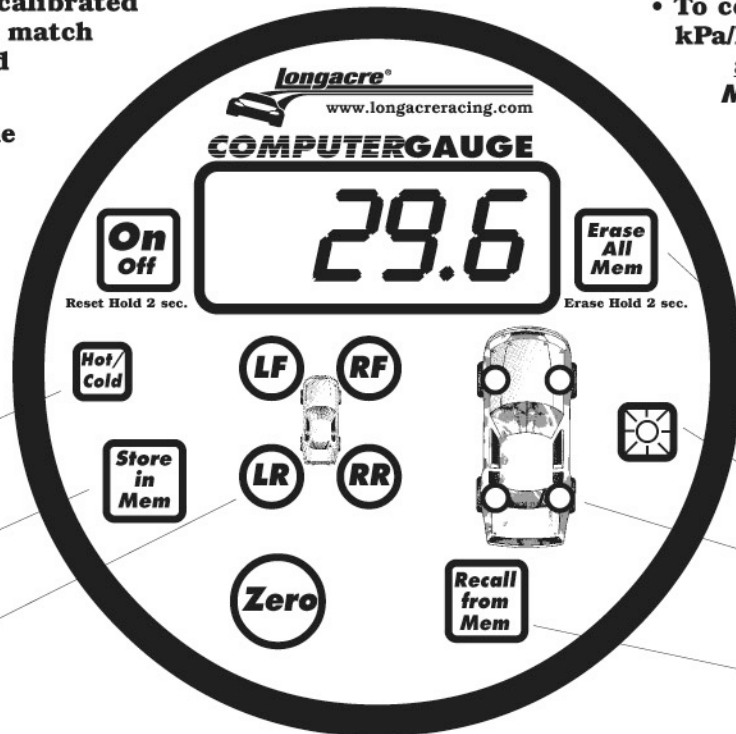

- Notes:**
- To convert to metric kPa/Bar press '**Zero**' and '**Recall from Memory**' buttons & hold both 3 seconds.

- Erase Memories
- Nite lite
- LEDs red for Hot, green for Cold
- Recall Memories