

StreetGlow®

LED LICENSE PLATE FRAME

CONTENTS:

- 1 - LED License Plate Frame
- 1 - LED Controller (LC4)
- All necessary mounting hardware

Quick Test Sequence

- Step 1 Unpack entire contents of package and check for any damaged products before moving to the test sequence.
- Step 2 Place LED License Plate Frame on a test area and plug the control wire into any one of the four available ports on the back of the LED Controller (LC4).
- Step 3 Using a 12v DC power source, connect the LC4's RED (ignition) and YELLOW (power) wires to the positive (+) 12v lead of the power source. *Note: DO NOT connect the BLUE (alarm) wire for this test.*
- Step 4 Connect the LC4's BLACK (ground) wire to the power supply's negative (-) output.
- Step 5 Press and hold the ON/OFF button to activate all LED segments. *NOTE: If none of the LED's light up, then go back to Step 2 and check your connections.*

Installation Instructions

- Step 1 Select the desired location for the LED Controller (LC4) and mount using the supplied mounting hardware.
- Step 2 With the LC4 mounted make connections of power and ground to the LC4's power harness.
YELLOW wire = 12v battery (+)
RED wire = 12v ignition (+)
BLACK wire = ground (-)
BLUE wire = alarm (-) input (optional connection)
NOTE: Vehicles with aftermarket alarms can use the LED License Plate Frame's alarm feature to activate when ignition kill is enabled with a negative trigger.
- Step 3 Mount the LED License Plate Frame to the vehicle using screws provided.
- Step 4 Run the control wire to the back of the LC4 and plug into one of four available ports.
- Step 5 Once the wiring and mounting of all components are complete, test the LED License Plate Frame's sequential lighting effects.



LED CONTROLLER (LC4)

- YELLOW = 12v Batt. (+)
- RED = 12v Ign. (+)
- BLUE = Alarm (-)
- BLACK = Ground (-)

LED Controller (LC4) Operation

- Turn unit on by pressing and holding ON/OFF button for 2 seconds
- Turn unit off by pressing and holding ON/OFF button for 2 seconds
- Change pattern by pressing PATTERN button
- Increase speed/sensitivity by pressing + button
- Decrease speed/sensitivity by pressing - button

Modes and Sequential Lighting Effects

MODES: All LED's On/Music Interface/Sequential Lighting Effects
Turn unit on and select the desired mode of operation pressing the FUNCTION button.

Main Functions

- 1st Press FUNCTION button = All LED's On Mode
- 2nd Press FUNCTION button = Music Interface Mode (dances to the beat of your music)
NOTE: Use the +/- buttons to adjust the sound sensitivity
- 3rd Press FUNCTION button = Sequential Lighting Effects Mode (starts in DEMO)
NOTE: Use the +/- buttons to adjust the pattern speed
When the LC4 is in Sequential Lighting Mode, you are able to select up to 8 different lighting effects by pressing the PATTERN button.

Alarm Feature

The LED License Plate Frame's alarm feature activates when the BLUE (alarm) wire is triggered with a negative (ground) input.
NOTE: This feature functions ONLY when the vehicle is off. When the alarm feature is active, the top center bank of LED's will flash once per second.

WARNING!

The retailer shall not be held responsible for any damages that occur as a result of defective products. StreetGlow products are recommended for show and off-road use only. Laws concerning the use of aftermarket lighting products may vary from state to state. For more information, please check with your local authority.

All StreetGlow products are covered by a comprehensive warranty.

StreetGlow neon products are warranted against defective materials and workmanship for as long as the original purchaser owns the product. StreetGlow Radio Bars and other non-neon products (excluding fog and driving lights, and HID bulbs) are warranted against defective materials and workmanship for two years from date of purchase. Fog and driving lights, and HID bulbs are warranted for one year from date of purchase. Any product that should fail for either defective materials or workmanship will be repaired or replaced, at StreetGlow's option, as the sole remedy of the buyer. Proof of purchase is required. All warranty claims are to be handled by selling agents. Accident, abuse, neglect, modifications, broken glass, labor, transportation, improper installation and the use of products other than for their intended purposes are not covered. NEITHER SELLER NOR THE MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS), ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT AND THE USER AGREES THAT NO OTHER REMEDY SHALL BE AVAILABLE TO IT. Before using, the user shall determine the suitability of the product for the intended use, and user assumes all risk and liability whatsoever in connection therewith. Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and from country to country. DISCLAIMER: THE FOREGOING WARRANTY IS AN EXCLUSIVE WARRANTY IN LIEU OF ANY OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES (INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) TO THE EXTENT THAT IT COULD APPLY TO ANY OF THE PRODUCTS MANUFACTURED BY THE COMPANY SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESS WARRANTY GIVEN ABOVE.

Design and specifications are subject to change without notice.

StreetGlow

LED LICENSE PLATE FRAME