

CHEVY ATTITUDE FAQs

Q: WILL I NEED ADDITIONAL GAUGES?

A:

No, with the addition of the Attitude controller, there will no longer be a need for gauges. With the backlit display screen, Exhaust Gas Temperature temperatures and boost readings are displayed for easy and clear reading either digitally or as a bar graph.

Q: HOW MANY VARIABLES DOES THE ATTITUDE TRACK AT A TIME?

A:

The Attitude can display up to 4 variables at a time digitally or you can choose 2 different variables at a time to be displayed as a bar graph.

Q: WHAT DOES THE CHEVY ATTITUDE DO?

A:

The Attitude allows you to

- Change power levels on the fly
- Display EGT and Boost
- Display engine temperatures
- Display percent engine load
- Automatically prevent transmission slip
- Automatically de-fuel to control EGT
- Display 0-60 time
- Display quarter mile time
- Display corrected speed
- Display RPM
- Torque lock
- Display current gear
- Throttle percentage
- Low boost fueling adjustment
- Disable EGT backdown for specified time
- Store and display max values and set audible alert settings

Q: CAN I ADJUST MY TIRE SIZE?

A:

Yes. The Chevy Attitude can show your vehicle's correct speed even if you have non-stock wheels.

If you have additional questions please contact Edge customer service at 1.888.360.EDGE