

Note- 3" to 4" of ground clearance is a MUST for Towtector to work



TOWTECTOR® SHIELD EASILY ATTACHES TO BALL MOUNT ON TOW VEHICLE

1-3/4" of space required on ball mount to install Towtector.

TOWTECTOR- SHIELD INSTALLATION INSTRUCTIONS

Open Towtector Box and lay Towtector parts on a piece of carpet (or something similar). Set all pieces on their top. (See Photo) Make sure that all 3 Towtector sub assemblies have face side towards you and all bolt holes are to the middle.

Slide each end sub assembly into center sub assembly and insert (4) 5/16" x 2 1/2" stainless steel carriage bolts. Make sure that the carriage head of the bolt is to the face side. Put flat washer and nut on back side of assembly. Align Towtector and make sure it is straight and flat. Tighten bolts securely.


Please check center sub-assembly bolts to make sure they are secure after usage!!!



[**CLICK TO ENLARGE**](#)

Loosen Bolt on Towtector Shield mounting and slide the Towtector onto the ball mount. Install ball mount into receiver hitch and install pin (not included). Then adjust Towtector on ball mount to desired location. Tighten bolts with 3/4" wrench.

NOTE: It is recommended to mount Towtector as close to the vehicle as possible without hitting the vehicle.

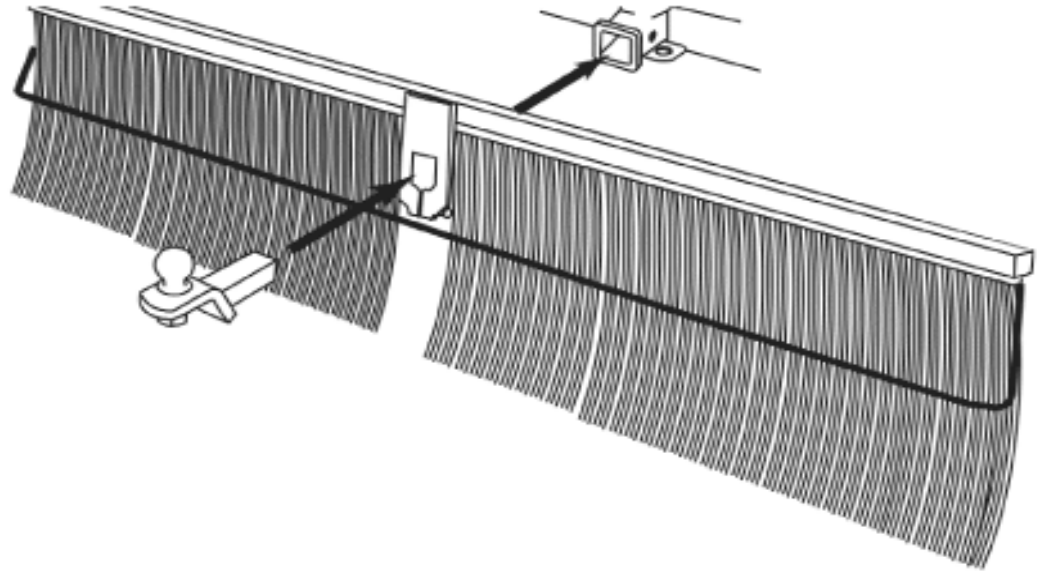

Wall Storage Bracket

Included is Wall Storage Bracket and lag bolts.

Please fasten firmly to wall for safe storage of your Towtector.