


ROLL-TOP-COVER™

Clamp On Rail Installation Instructions


(Please refer to the Roll-Top-Cover™ Installation Instructions when installing the clamp-on rails.)

1. Install guide strips* inside the rails (see Step 4 of the Roll-Top-Cover™ Installation Instructions) before installing the rails.
2. Close Tailgate and position rails so they make contact with the tailgate.
3. Shim rails (if needed) between the rail and the truck at each clamp location (see figure 1 of the Roll-Top-Cover™ Installation Instructions)
4. Install Inner Rail Clamp (1) through the slot in the bottom of the rail. Hook the lower groove of the Inner Rail Clamp (1) onto the lip of the rail. (1a)
5. Tighten bolt and rotate the Outer Rail Clamp (2) clockwise to tighten rail securely against truck bed rail. (Note: the Outer Rail Clamp (2) may not rotate straight up and down.)
6. Adjust and tighten the guide strips* (see step 6 of the Roll-Top-Cover™ Installation Instructions.)

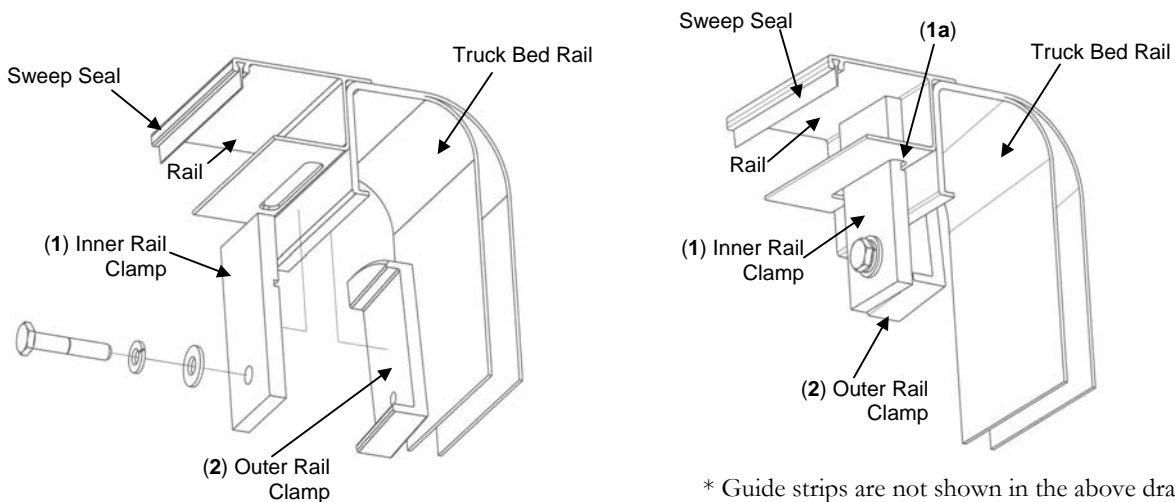

Canister Installation Instructions

1. Move the canister back against the side rails.
2. Center the canister side-to-side on the truck bed and fasten it in place with the canister clamps. The canister clamp may be different in some vehicles.
3. Use one clamp per side of canister. Install ¼ - 20 bolt (3) with fender washer (4) through one of the slots in each end of the canister and attach the Canister Clamp (5). The canister clamp can be installed with either side up, depending on the gap between the canister and the truck rail.

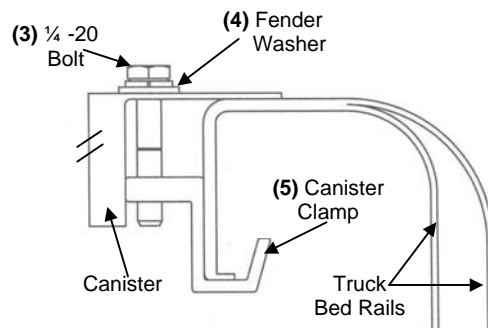

Please contact Pace Edwards Technical Support if you have any questions.
(800) 338-3697

Thank you for purchasing **PACE EDWARDS** products

