


INSTALLATION SHEET-Ford Flareside '92-96

CLASSIC
**PLATINUM &
BLACKMAX™**

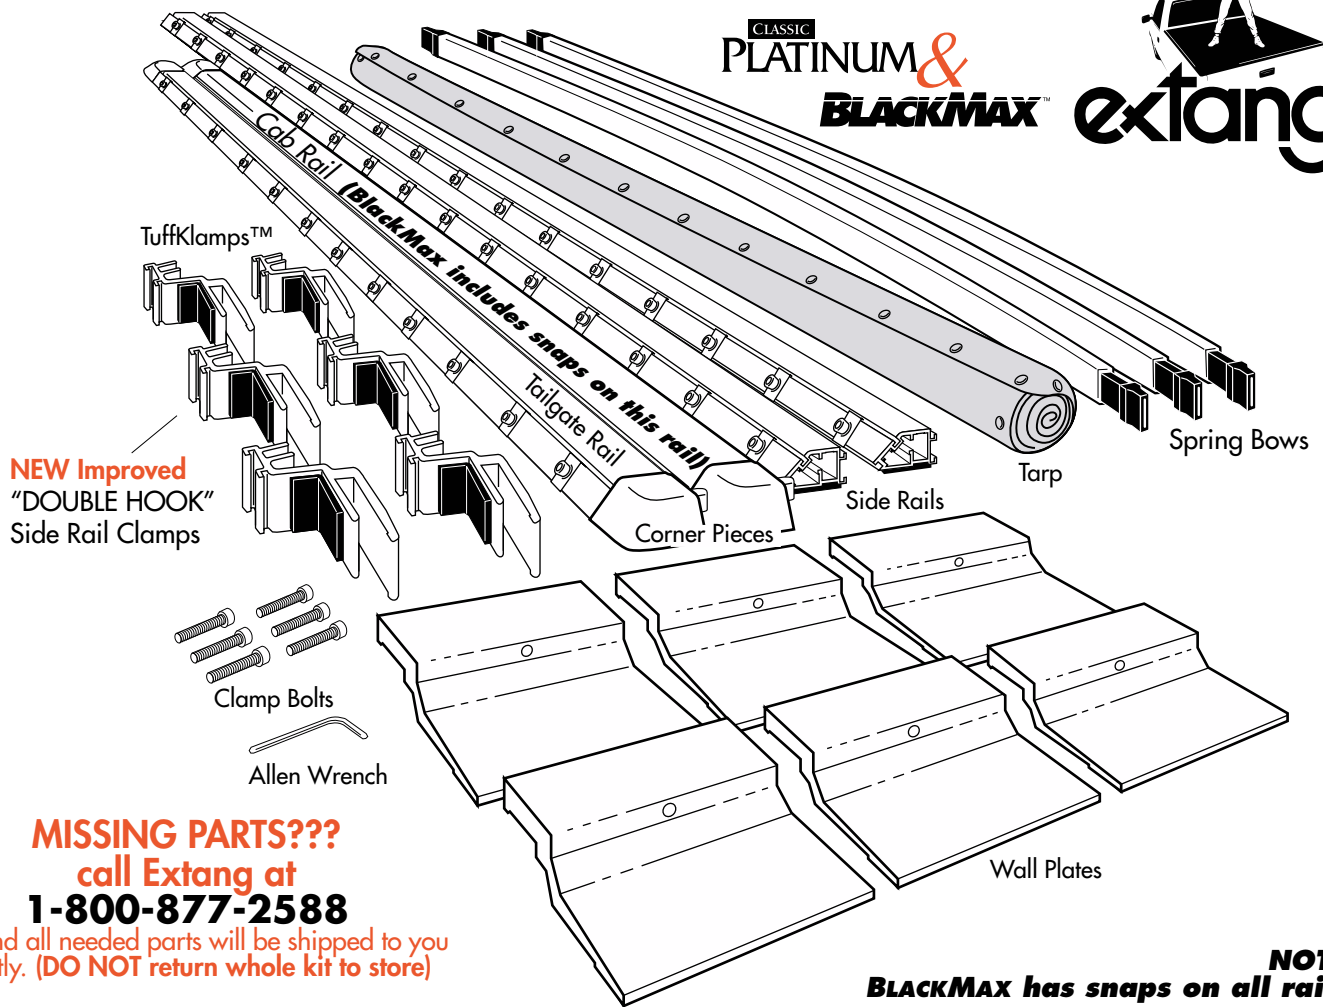

NEW Improved
"DOUBLE HOOK"
Side Rail Clamps

MISSING PARTS???
call Extang at
1-800-877-2588

Any and all needed parts will be shipped to you directly. (DO NOT return whole kit to store)

NOTE:
BLACKMAX has snaps on all rails.

PARTS INCLUDED IN YOUR KIT. You may want to lay them out in this manner for accessibility.

1

Wash truck bed.

Alcohol Pad

IMPORTANT: Clean here with alcohol pad. (Both Sides)

2

Foam has NO adhesive to touch truck finish.

PLEASE DO NOT LITTER

Remove paper tape from all rails. Discard properly.

3 For Classic Platinum Only (This step does not apply to BlackMax)

ClickLock™

Pull back on the ClickLock™ release and remove one corner from cab rail.

Feed tarp dowel into cab rail. (NOTE: For easiest feeding action, place tarp on a flat smooth surface, and keep dowel straight while feeding into cab rail. Caution, pavement may scuff tarp.)

Reinsert corner piece into cab rail until it "clicks" and locks into place.

4

Off the truck bed, connect the end rails to the two side rails.

extang
Stands for Quality

Extang Corporation
1901 E. Ellsworth Rd.
Ann Arbor, MI 48108
734 677-0444, Fax: 734 677-8409


Visit us at:
www.extang.com

Item No. 0011-0102RH Printed in U.S.A.

5

Place the rail assembly over the side of the truck box. Center rails evenly between cab and tailgate. (NOTE: Some applications have hard rubber risers (square rubber pad.) A riser must go toward tailgate. Some applications will have a riser at both ends, (most have no riser).)

When positioning wall plates be sure that they fit correctly against the truck bed wall.
The plates must seat against the bottom of, and parallel to, the wall indentation.

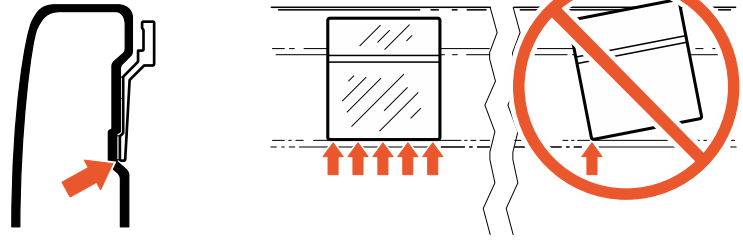

Note: For over-the-rail bed liners see Extang Bedliner Supplement #0031)

6 **Clamp Spacing** (Same for each side)
 See the stickers located on each side rail for clamp position, or refer to the dimensions given below.
 Note: Remove stickers after installation.

12 inches 12 inches

Center middle clamp

Place Clamp Here STICKER

Press wall plate firmly in place. Allow wall plates to set over night.

After wall plates have set, insert side rail clamp all the way into rail.

Note: Measure all distances from screw hole centers.

7

Insert clamp bolt in place.
Do Not Overtighten

8 Insert bow onto top or bottom peg.
 (Top peg for performance, Bottom for good looks.)

Upper Peg or Lower Peg

SPECIAL FEATURE: Two pegs offer two height adjustments.

Note: Bow End does not fit between pegs.

Not Do Not Place Between the Pegs

9 **Start at Corners** Attach tarp by starting at the corners, and snap in place.

SPECIAL FEATURE Weather-adjustable Snaps

Studs Down Slides Off Rotate 180° Studs Up

TIGHTER LOOSER TIGHTER LOOSER TIGHTER LOOSER TIGHTER LOOSER

SUMMER SETTING Takes up slack in tarp caused by warm weather.

WINTER SETTING Allows more slack in tarp for cold temperatures.

EASY USE OF TRUCK BED
 Tarp may be rolled up and secured with Velcro® for bulk hauling

To Keep Your **CLASSIC PLATINUM & BLACKMAX™**

tonno looking great! Clean with Mild Soap and Water ONLY or Use EXTANG's **TONNO TONIC™**—specially formulated for vinyl tonno covers. It cleans, protects, and beautifies in a simple one-step application.

Use of vinyl conditioners (such as Armor All) will void your tonno warranty!

